Plaatsen van peesdoek in frame

Installing the mesh fabric in the frame

Binnenste of buitenste gleuf
De doeken gaan aan de boven- en onderkant in de bovenste en onderste gleuf.

De zijkanten gaan standaard in de binnenste gleuf (zie afbeelding rechts).

Hierdoor:
- kan er altijd een sectie worden aangebouwd;
- blijft er een gleuf beschikbaar om een apart doek in te plaatsen;
- kunnen de huidige doeken worden hergebruikt voor andere opstellingen.

Omgevingstempertuur/vocht
Doeken voelen wat strakker aan als ze net zijn geprint. Bij de 2e keer plaatsen gaat dit al makkelijker. Doeken zijn gevoelig voor temperatuur. Hierdoor kan de pasvorm per keer iets kan afwijken. Het aanbrengen vraagt daardoor de ene keer wat meer aandacht dan de andere keer.

Opbergen van doeken
Vouw de doeken netjes en losjes op. Zorgen dat het niet in de verdrukking komt. Doeken zijn gevoelig voor vocht. Dit kan invloed hebben op de inkt. Dus sla de doeken op in een droge ruimte en op kamertemperatuur.

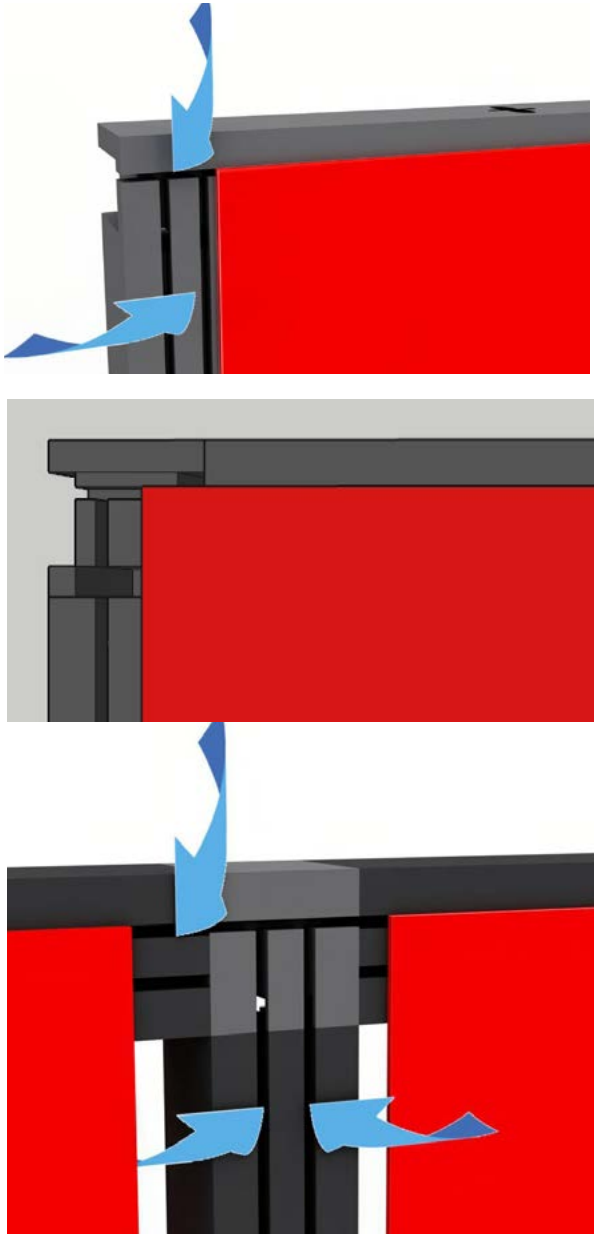

Inner or outer slot
The panels are inserted into the top and bottom slots at the top and bottom.
The sides are inserted into the inner slot by default (see image on the right).

This means:
- *a section can always be added*
- *a slot remains available to insert a separate panel*
- *the current panels can be reused for other configurations.*

Ambient temperature/humidity
Canvases feel slightly stiffer when they are freshly printed. This becomes easier the second time they are installed. Canvases are sensitive to temperature. As a result, the fit may vary slightly each time. Installing them therefore requires a bit more attention sometimes than others

Storing canvases
Fold the canvases neatly and loosely. Make sure they are not crushed. Canvases are sensitive to humidity. This can affect the ink. So store the canvases in a dry room at room temperature.

Plaatsen van peesdoek in frame

Installing the mesh fabric in the frame

De pees
De doeken zijn rondom afgewerkt met een siliconen strip (pees). Duw de pees niet alleen aan het uiteinde in de gleuf, maar samen met het doek, zoals op de foto's rechts. Anders zit het doek te los en kan het eruit vallen. De doeken zijn eenvoudig te plaatsen doordat de brace rods pas achteraf worden geplaatst.

Begin met de hoeken en daarna de lange zijdes. Start rechtsboven en duw de pees in de gleuf. Plaats het doek eerst ongeveer 10 cm opzij en naar beneden, niet direct volledig. Zorg dat de pees strak in de hoek zit en trek het doek indien nodig iets aan.

Doe daarna hetzelfde bij de andere hoek. Soms moet u iets aan het doek trekken om de hoek goed te plaatsen. Nieuwe prints kunnen wat strakker aanvoelen.

Herhaal dit aan de onderkant (zie 4 t/m 6). Duw daarna de rest van de pees rondom in de gleuf. Werk zoveel mogelijk met een naar buiten gerichte beweging en niet met de pees mee. Zo voorkomt u lichte rimpels.

Ziet u toch een rimpel, maak het doek dan plaatselijk los en duw de pees opnieuw in de gleuf.

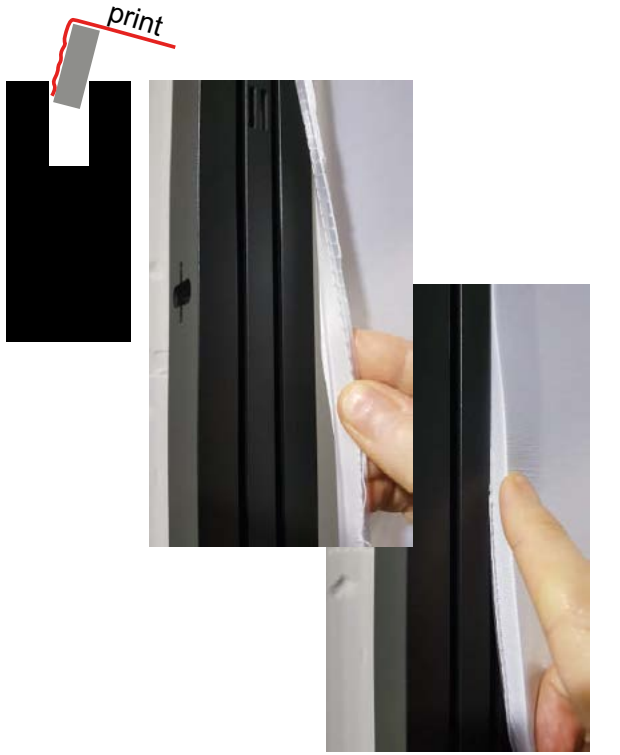

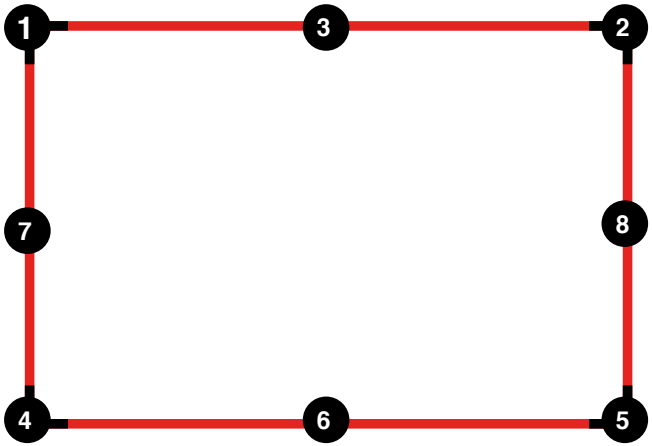

The Silicone Edge
The mesh is finished all around with a silicone edge (keder). Do not push only the edge itself into the groove, but insert it together with the fabric, as shown in the photos on the right. Otherwise, the fabric may sit too loosely and fall out. The fabrics are easy to install because the brace rods are placed afterwards.

Start with the corners, then the long sides. Begin in the top right corner and press the keder into the groove. First position the fabric about 10 cm to the side and downward, not fully at once. Make sure the keder fits tightly into the corner and gently pull the fabric if needed.

Repeat this for the other corner. You may need to pull the fabric slightly to fit the corner properly. Newly printed fabrics can feel tighter.

Repeat this at the bottom (see steps 4-6). Then press the remaining keder into the frame groove. Work as much as possible with an outward motion rather than along the keder. This helps prevent wrinkles.

If you still notice a wrinkle, loosen the fabric slightly in that area and press the keder into the groove again.